

# SKORPION

## PISTOL CROSSBOW STEEL BALLS



### SPECS

Weight: 910 g  
Draw weight: 28lb  
Velocity: 140 fps  
Power stroke: 4.7"

### ACCESSORIES INCLUDED

3 fishing bolts

3 standard bolts

3 mini bolts

3 fishing reels

6 mm steel balls

# GENERAL INSTRUCTIONS FOR PISTOL CROSSBOW STEEL BALLS

## IMPORTANT!

Read the manual book first before shooting.

Don't make the cocking too long which will affect the life of the crossbow limbs.

Shoot with the arrows in the package, no other alternatives!



- ① Bolts/steel balls switch button: if you shoot steel balls, pull out the switch button as shown in *picture 1*. Push in the button when shooting bolts.



- ② Loading: push forward the loading button on the rail to the end and turn it to the right notch, making sure it does not bounce back. After loading, turn the loading button back left to its original position (as illustrated in *picture 2*).




- ③ Cocking: pull the cocking hook to the back end to make the string reach the safety lock and be engaged into the trigger mechanism (the safety catch will unlock automatically. If the switch button is in the pulled-out position, the steel ball will fall into the track automatically) (As shown in *picture 3* and *picture 3A*).



- ④ Loading the bolt: before using the bolts, check and make sure that the switch button is in the pushed-in position, then insert the bolt from the front end of the rail (as illustrated in *picture 4*).



- ⑤ Shooting the fishing arrow: first, install the reel on the thread in the crossbow rail front end, then turn the reel on the thread to make sure that the center of its two little cylinder in the side of the reel. Installing the fishing arrow, make sure the hook at the end of the arrow looks downward (as illustrated in picture 5).

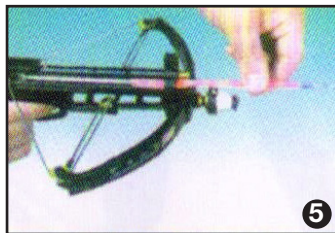

- ⑥ The cocking hook: after installing arrows & steel balls, push the cocking hook back to the safety catch, which is still in the safe position, (for your safety, don't push the cocking hook back to the end at once after cocking, but do it just before shooting), (as illustrated in picture 6).



- ⑦ Adjusting the notch & the sight: turn the notch axes, shifting the notch right and left to adjust the deviation of the hitting point in the target. The sight has three pins. Use the correct one for aiming depending on the target distance (as illustrated in picture 7).




- ⑧ Shooting: lock the safety catch and hold the crossbow grip with one hand or both hands, when the notch, the sight and the target come into one line, you can hit the target pulling the trigger of the crossbow (as illustrated in picture 8).



**NOTE:** don't pull the trigger when the safety catch is on the pull-out position (as illustrated in picture 8A).

alternative button

safety catch

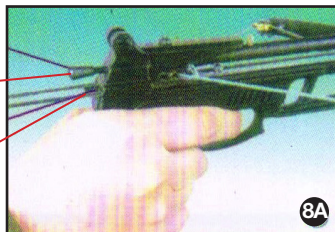

**WARNING:**

- 1)** people under age are strictly prohibited from using this product; **2)** never shoot at any animals or human; **3)** don't dry fire the bow (shooting without arrows); **4)** don't impede the movement of the crossbow string by any part of your body; **4)** use the crossbow by law.



**Thank you for choosing a  
Skorpion Crossbow.**

**Grazie per aver scelto  
una balestra Skorpion.**

**Danke, dass Sie sich für eine Skorpion  
Armbrust entschieden haben.**

**Merci d'avoir choisi une arbalète  
Skorpion.**

**[www.BigArchery.com](http://www.BigArchery.com)**